 




# HINKLEY® LANDSCAPE LIGHTING

## I.S. 154 Nexus Mounting Instructions

**Drawing 1**

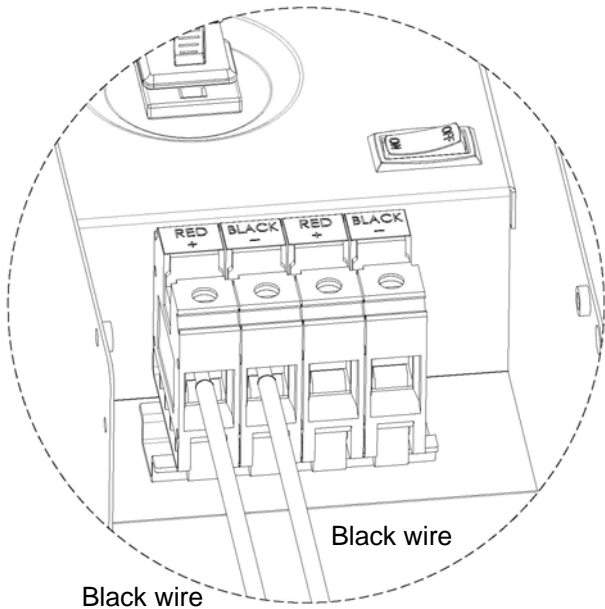

▼ start here

**SAFETY WARNING: TURN POWER SUPPLY OFF DURING INSTALLATION. IF NEW WIRING IS REQUIRED, CONSULT A QUALIFIED ELECTRICIAN OR LOCAL AUTHORITY FOR CODE REQUIREMENTS.**

**IMPORTANT OPERATION NOTE:** THIS LIMINAIRE IS DESIGNED TO BE OPERATED WITH HINKLEY APPROVED 12-15 VOLT AC or DC LED DRIVERS.

**INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS, IMPORTANT SAFETY INSTRUCTIONS.**


**Lighted lamp is HOT!**

Warning – to reduce the risk of FIRE OR INJURY TO PERSONS:

- Lamp gets hot quickly! Contact switch / plug when turning on.
- Do not touch hot lens, guard or enclosure.
- Keep lamp away from material that may burn.
- Do not touch lamp at any time. Use soft cloth. Oil from skin may damage lamp.
- Do not operate the luminaire or fitting with a missing or damaged shield.
- Luminaires shall not be installed within 10 feet (3m) of a pool, spa or fountain.

SAVE THESE INSTRUCTIONS

 **Drawing 2**

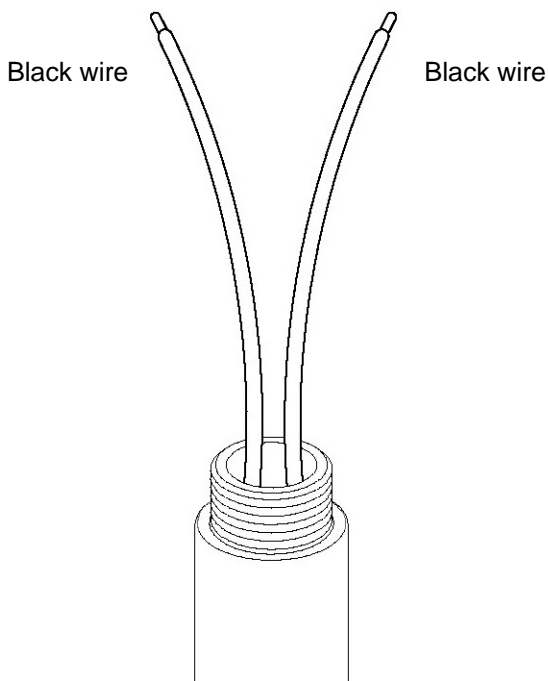

**This fixture is provided with (2) silicone filled wirenuts for use to connect the luminaire to supply wires from driver.**

**The main low voltage cable from the driver is to be:**

1. Protected by routing in close proximity to the luminaire or fitting, or next to a building structure such as a house or deck.
2. Not to be buried except for a maximum 6 inches (15.2 cm) in order to connect to the main low voltage cable.
3. Have the length cut off so that it is connected to a connector within 6 inches (15.2 cm) from a building structure, a luminaire or fitting.

Luminaire is supplied with two black wires (see drawing 1 & drawing 2). It does not matter which wire is connected to the red (12v -15v) terminal or the black (common) terminal on the transformer. The internal components of the Nexus LED engine will route the power properly.