




HINKLEY®
LANDSCAPE
LIGHTING

I.S. 154 Nexus Mounting Instructions

Drawing 1

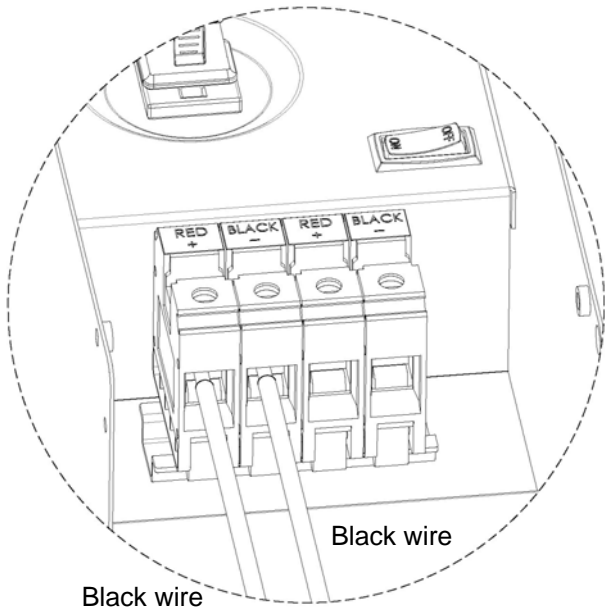

▼ **start here**

SAFETY WARNING: TURN POWER SUPPLY OFF DURING INSTALLATION. IF NEW WIRING IS REQUIRED, CONSULT A QUALIFIED ELECTRICIAN OR LOCAL AUTHORITY FOR CODE REQUIREMENTS.

IMPORTANT OPERATION NOTE: THIS LIMINAIRE IS DESIGNED TO BE OPERATED WITH HINKLEY APPROVED 12-15 VOLT AC or DC LED DRIVERS.


INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS, IMPORTANT SAFETY INSTRUCTIONS.

Lighted lamp is HOT!

Warning – to reduce the risk of FIRE OR INJURY TO PERSONS:

- Lamp gets hot quickly! Contact switch / plug when turning on.
- Do not touch hot lens, guard or enclosure.
- Keep lamp away from material that may burn.
- Do not touch lamp at any time. Use soft cloth. Oil from skin may damage lamp.
- Do not operate the luminaire or fitting with a missing or damaged shield.
- Luminaires shall not be installed within 10 feet (3m) of a pool, spa or fountain.

Drawing 2

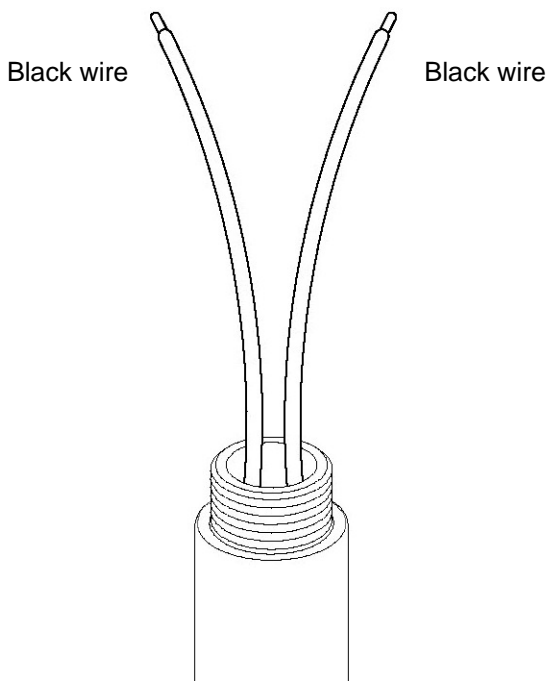

SAVE THESE INSTRUCTIONS

This fixture is provided with (2) silicone filled wirenuts for use to connect the luminaire to supply wires from driver.

The main low voltage cable from the driver is to be:

1. Protected by routing in close proximity to the luminaire or fitting, or next to a building structure such as a house or deck.
2. Not to be buried except for a maximum 6 inches (15.2 cm) in order to connect to the main low voltage cable.
3. Have the length cut off so that it is connected to a connector within 6 inches (15.2 cm) from a building structure, a luminaire or fitting.

Luminaire is supplied with two black wires (see drawing 1 & drawing 2). It does not matter which wire is connected to the red (12v -15v) terminal or the black (common) terminal on the transformer. The internal components of the Nexus LED engine will route the power properly.