

Model/Modelo/Modèle  
**T3554LF-▲LHP-WL**  
 Series/Series/Seria  
**Trinsic®**

**RP100908**  
 Mounting Plate & O-Rings  
 Placa de montaje y juntas tóricas  
 Plaque de montage et joints toriques


**RP100909**  
 O-Rings  
 Junta tóricas  
 Joints torique de bec

**RP104004▲**  
 Spout  
 Canalón  
 Bec

**RP100910**  
 Spout Mounting Sleeve  
 Manguito de montaje de la boquilla  
 Manchon de montage du bec


**RP103726**  
 Splined Adapter (2) & Screw (2)  
 Adaptador ranurado (2) y Tornillo (2)  
 Adaptateur cannelé (2) et vis (2)

**RP103907**  
 Set Screw & Allen Wrench  
 Tornillo de Ajuste y Llave Allen  
 Vis et Clé Allen

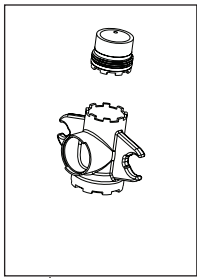

**RP48428-1.2**  
 Aerator  
 Aereador  
 Aérateur

**H558▲**  
 Wheel Handle  
 Mango de rueda  
 Poignée de roue

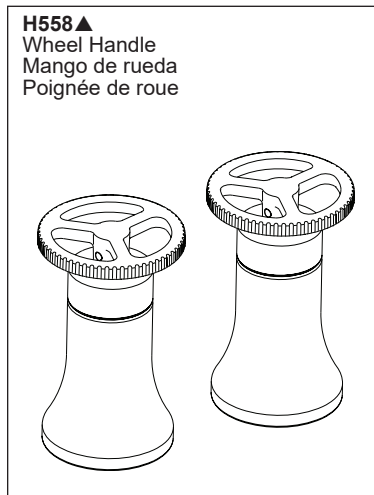

**H557▲**  
 Lever Handle  
 Manijas de palanca giratoria  
 Poignées à levier

