


## Installation instruction for the 1307 pier mount

Suggested ways of mounting to different materials.

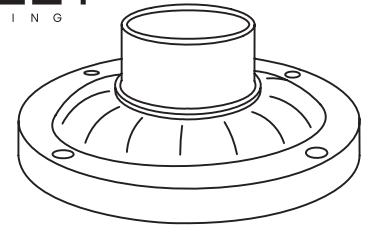

### Wood

Recommend using  $\frac{5}{16}$ " diameter lag bolts. They can be purchased at any hard-ware store or home center. A pilot hole  $\frac{3}{16}$ " in diameter should be drilled into the wood to prevent cracking.

### Concrete or Masonry

Recommend using a lead insert or expansion nut that is recommended for masonry. Available at home centers and hardware stores. Pilot hole should be drilled per manufactures instructions for the item you are using.

---

To layout the hole locations for drilling make a square that measures  $4\text{-}\frac{3}{8}$ " per side. At each corner of the square place a mark. This is where the required holes are to be dilled.

