

Vero Air

Montageanleitung

Mounting instructions

Notice de montage

Montagehandleiding

Instrucciones de montaje

Istruzioni di montaggio

Instruções de montagem

Monteringsvejledning

Asennusohje

Monteringsanvisning

Monteringsanvisning

Paigaldusjuhend

Instrukcja montażu

Инструкция по монтажу

Montážní návod

Návod na montáž

Szerelési útmutató

Upute za montažu

Instrucțiuni de montaj

Navodila za montažo

Ръководство за монтаж

Montāžas instrukcija

Montavimo instrukcija

Montaj kılavuzu

安装说明

설치 설명서

取り付け説明書

دليل التركيب

Waschtisch geschliffen

Washbasin, ground

Lavabo taillé

Wastafel geslepen

Lavabo bruñido

Lavabo levigato

Lavatório polido

Håndvask med slebet bordplade

Pesuallas hiottu

Slepet servant

Tvättställ slipat

Lihvitud valamu

Umywalka szlifowana

Умывальник шлифованный

Broušené umyvadlo

Umývadlo brúsené

Csiszolt mosdó

Izbrušen umivaonik

Lavoar elegant

Umivalnik, brušen

Полирана мивка

Slīpēta izlietne

Šlifuotas praustuvės

Lavabo taşlanmış

脸盆背部磨光

세면대(유광)

化粧洗面器

حوض مصقول

235010..

235050..








235070..
















072445..

235012..

235060..

235080..

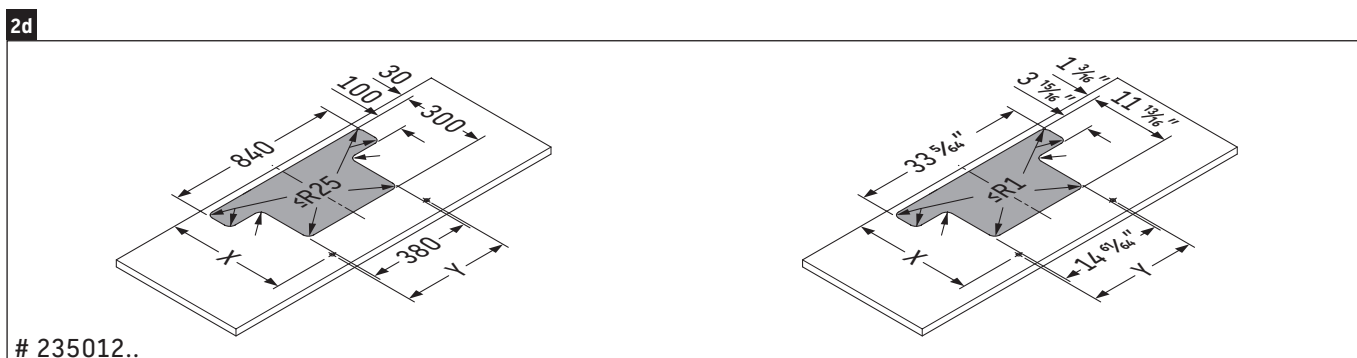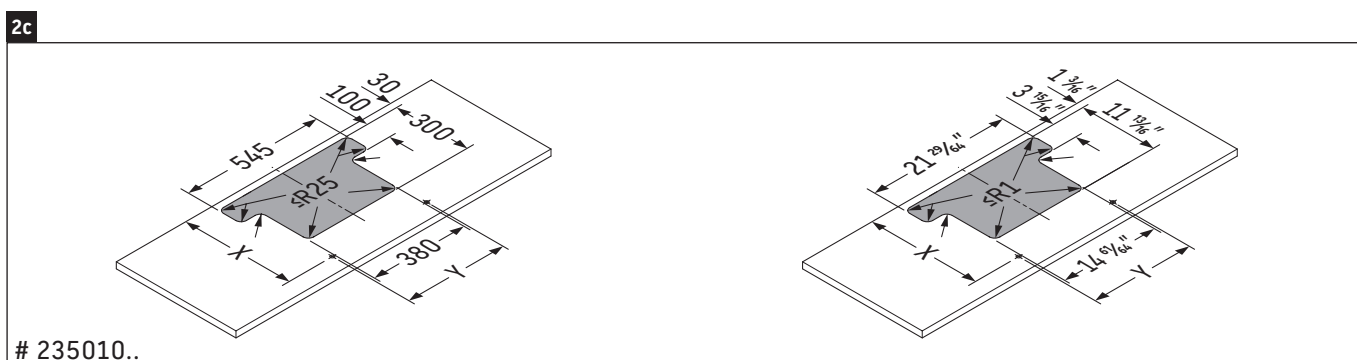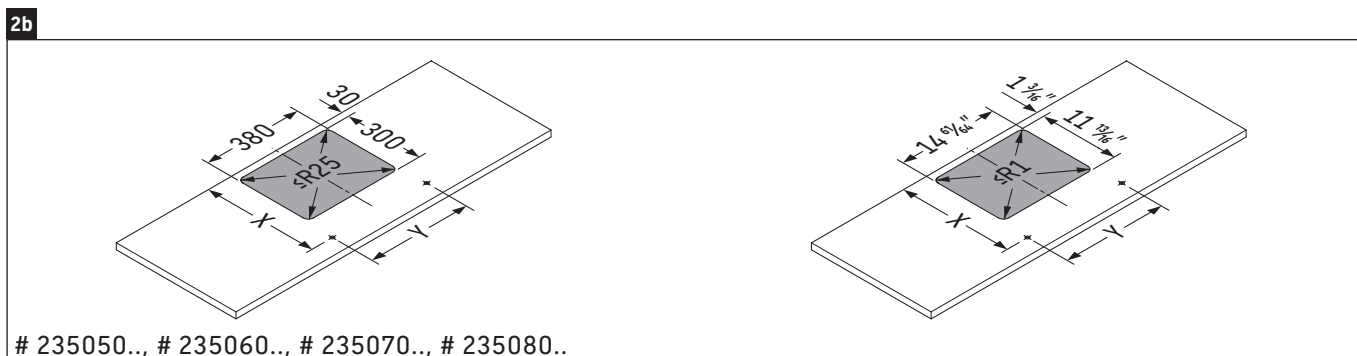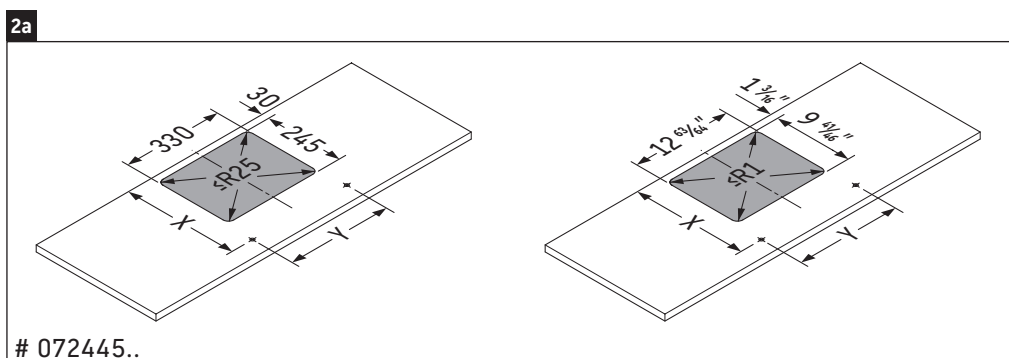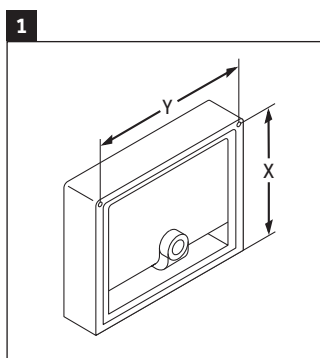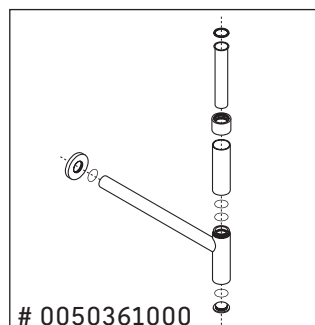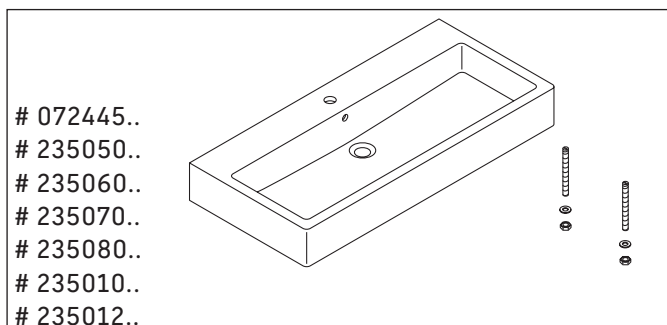

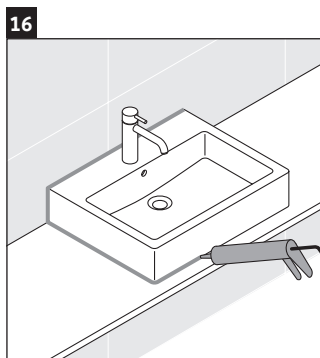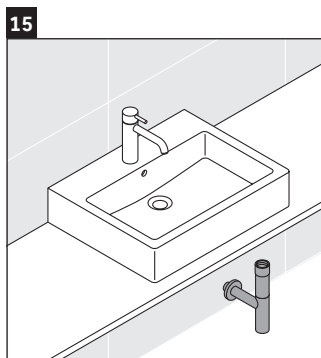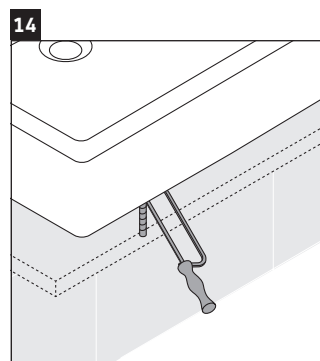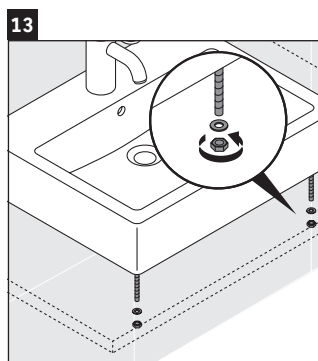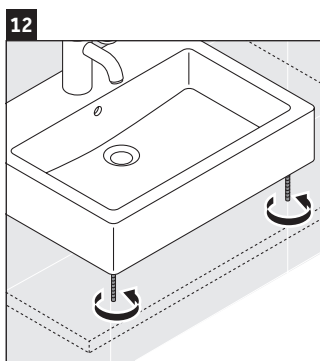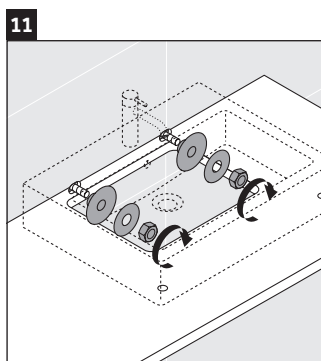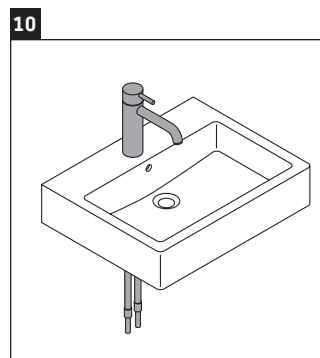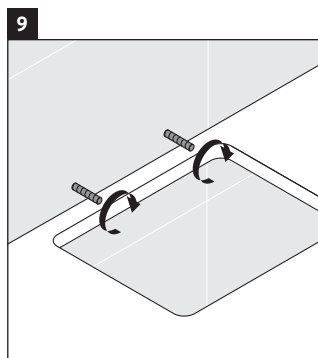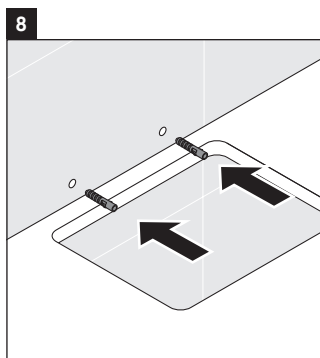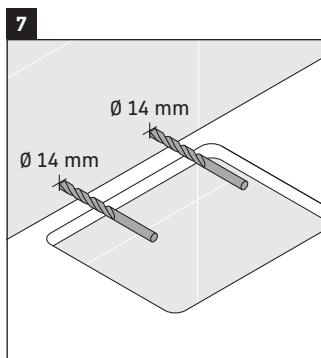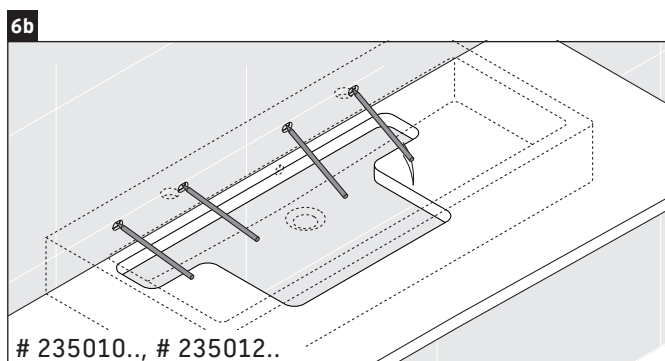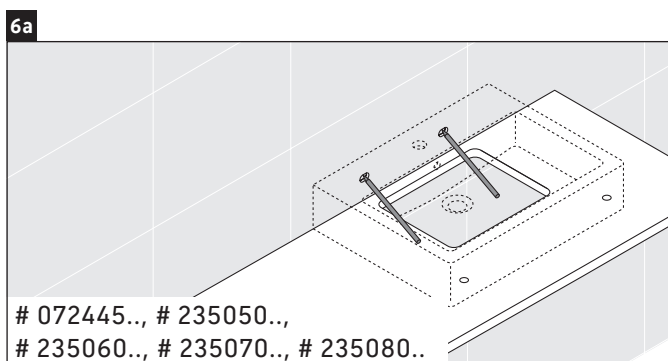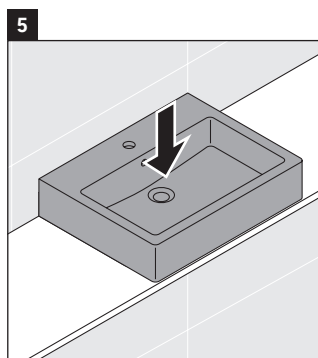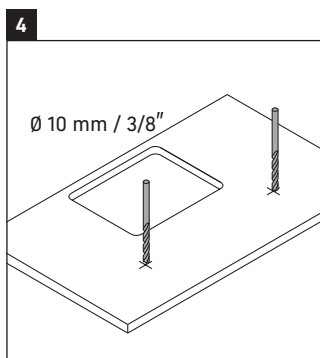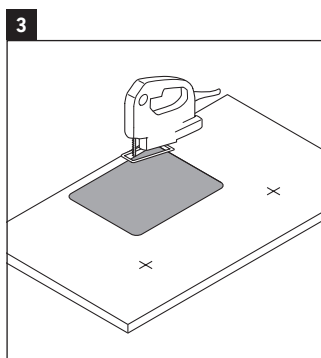

Duravit AG
P.O. Box 240
Werderstr. 36
78132 Hornberg
Germany
Phone +49 78 33 70 0
Fax +49 78 33 70 289
info@duravit.com
www.duravit.com

