


Assembly Instructions For


F2253/6+3 (E) 10/07

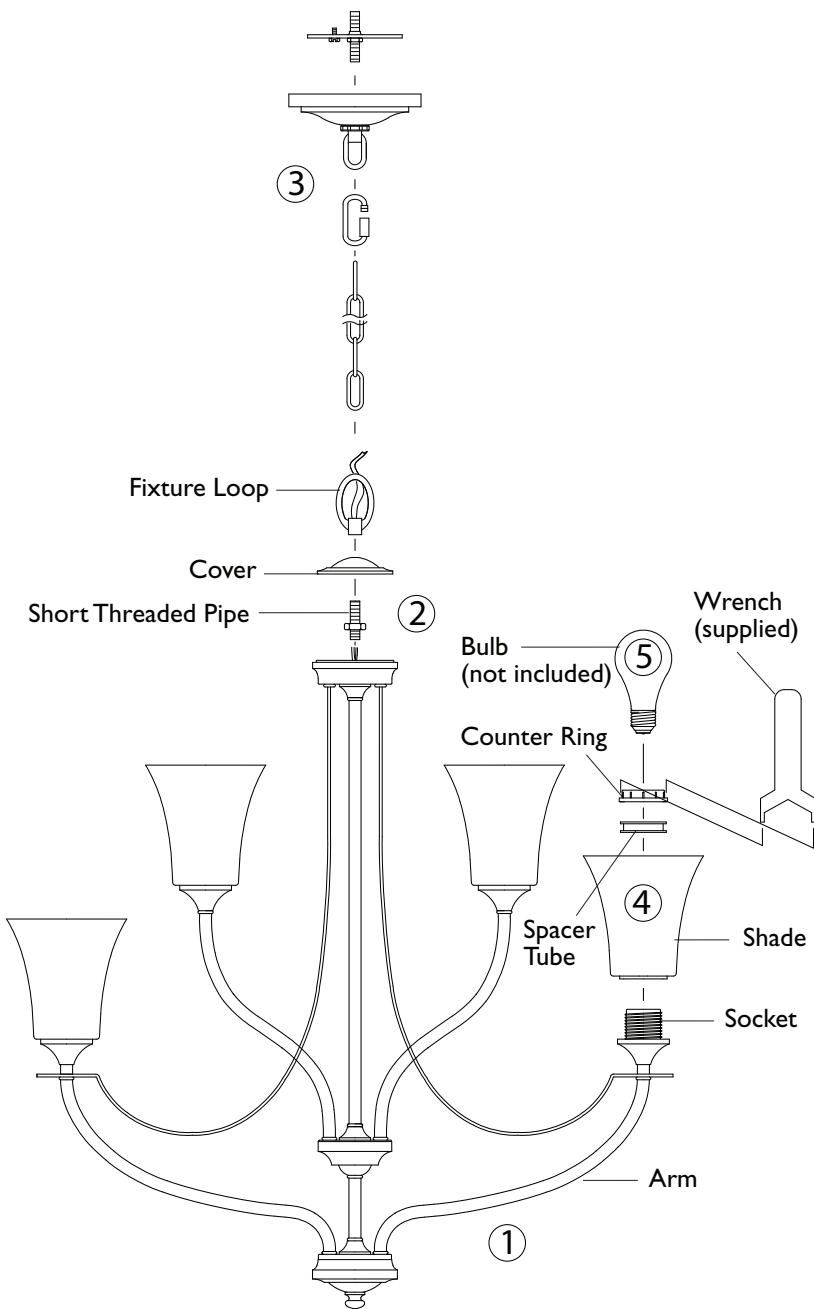

IMPORTANT
TURN OFF THE POWER AT THE MAIN FUSE OR
CIRCUIT BREAKER BOX
BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly.
 Bulb not included.

1. Spread open arms so they are evenly spaced apart from each other.
2. Install a hex nut onto bottom end of short threaded pipe leaving about 3/8" (10mm) of thread exposed. Slide short threaded pipe, cover, and fixture loop through fixture wires. Screw the short threaded pipe into coupler located at top of fixture. Tighten hex nut. Then slip cover through the threaded pipe. Lock all together by fastening the fixture loop onto protruding threaded pipe.
3. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
4. Place Shade over threaded socket then spacer tube and secure with counter ring, using supplied wrench.
5. Install light bulbs (not included). See label located at socket area for type and maximum allowed wattage.

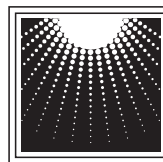

MURRAY
F E I S S
 Generation Brands™