



# Assembly Instructions For **VS12702, VS12703, VS12704** (E) 10/07

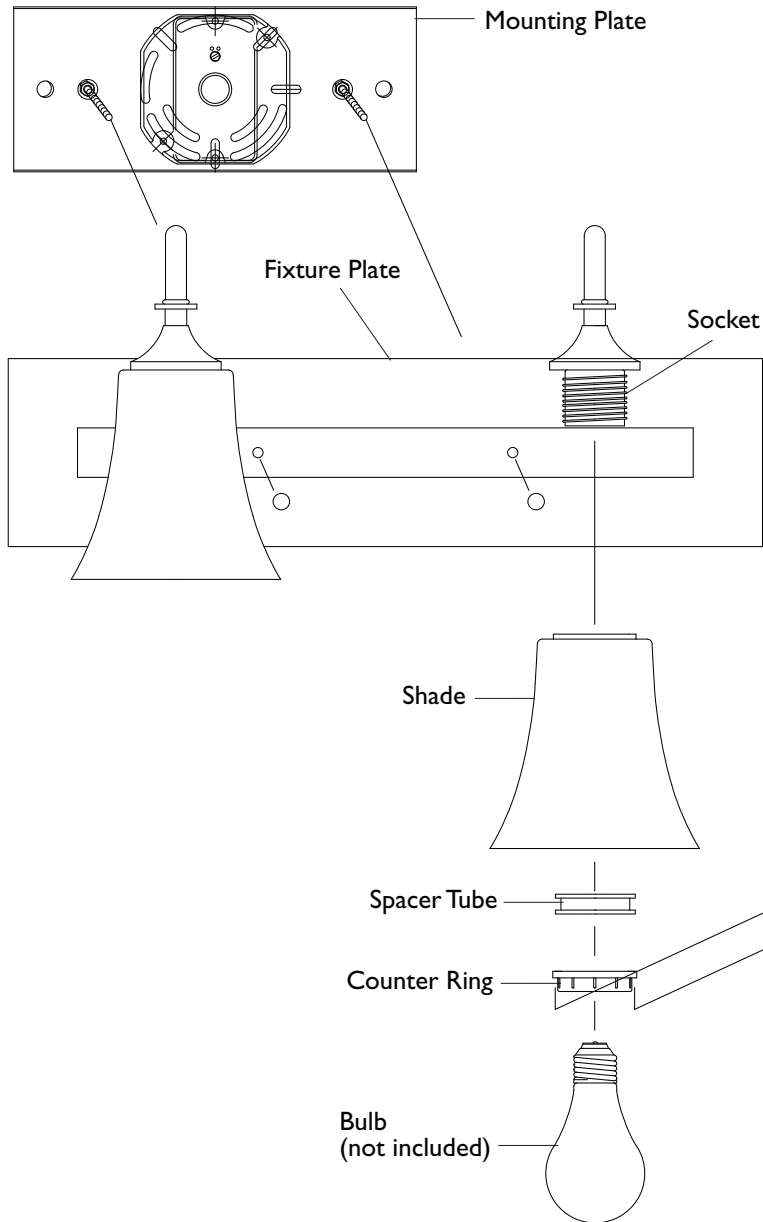

**IMPORTANT**  
**TURN OFF THE POWER AT THE MAIN FUSE OR**  
**CIRCUIT BREAKER BOX**  
**BEFORE STARTING INSTALLATION**

Carefully unpack and identify all parts before assembly.  
Bulbs not included.

1. Follow enclosed "Vanity Strip Installation Instructions" for electrical and fixture installation onto wall outlet box.
2. Place Shade over threaded socket then spacer tube and secure with counter ring, using supplied wrench.
3. Install bulbs (Not included). See relamping label located at socket area for type and maximum allowed wattage.

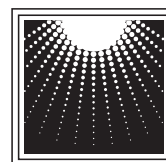

**MURRAY**  
**FEISS**  
Generation Brands™