
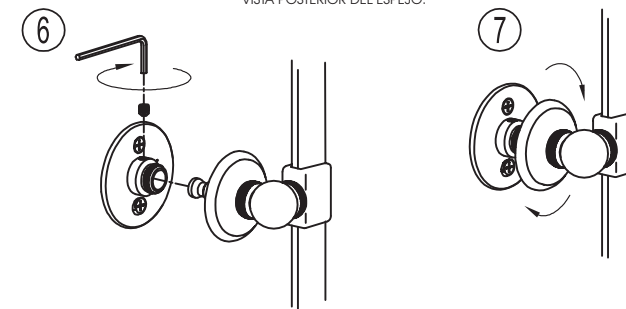
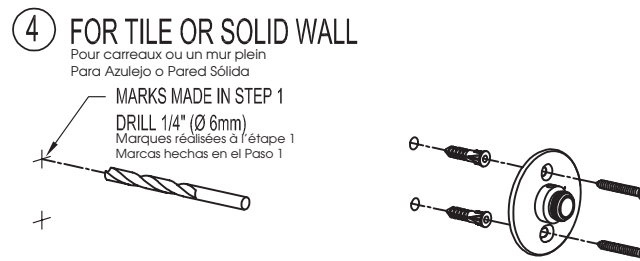
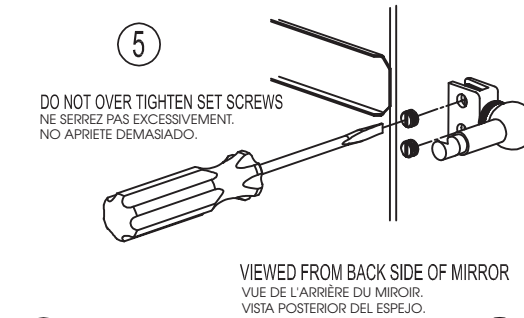
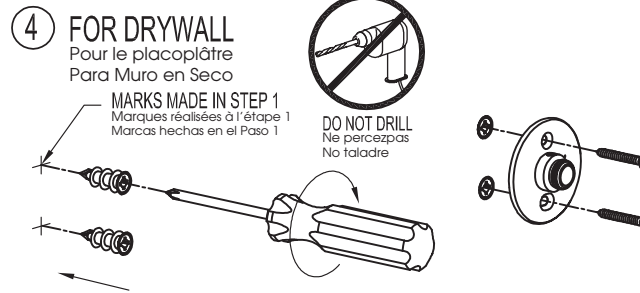
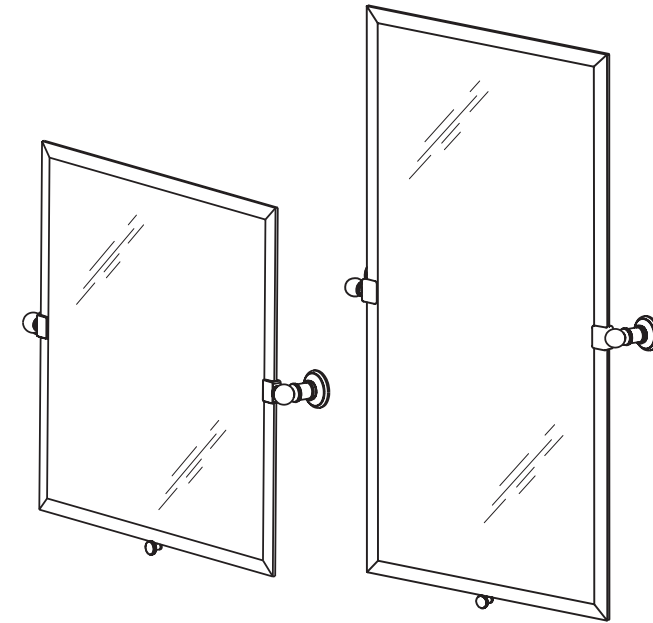
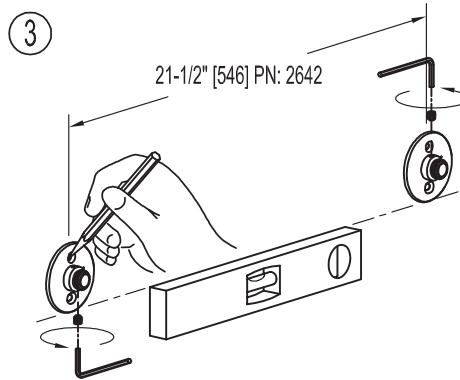


COLUMNAR™ MIRROR

INSTALLATION INSTRUCTIONS
INSTRUCTIONS D'INSTALLATIONS
INSTRUCCIONES PARA LA INSTALACIÓN

4541 & 4542
ADA COMPLIANT
CONFORME AUX EXIGENCES DE L'ADA
CUMPLE CON ADA

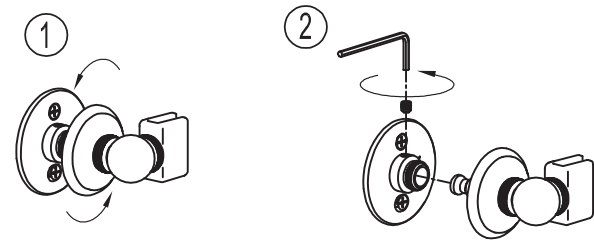

GINGER®

2001 Carnegie Ave
Santa Ana CA 92702