
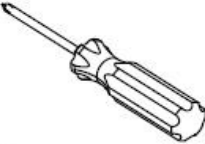






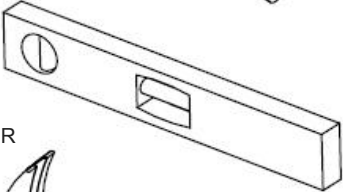

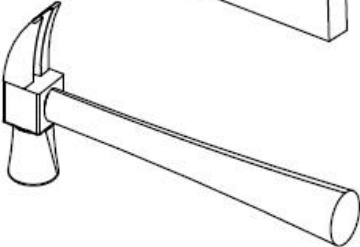
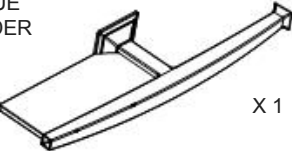


ITEMS INCLUDED	TOOLS REQUIRED
DRY WALL ANCHOR  X 2	PHILLIPS SCREW DRIVER 
TILE ANCHOR  X 2	PEN / PENCIL 
#8 SCREW  X 2	
MOUNTING BRACKET  X 1	1/4" (6 mm) DRILL 
M6 X 1 SET SCREW  X 1	LEVEL SET 
3MM ALLOY STEEL HEX KEY  X 1	HAMMER 
TISSUE HOLDER  X 1	

**GNG-4906-1**  
**EN-2087**  
**REV -**

## INSTALLATION INSTRUCTIONS


4906-1
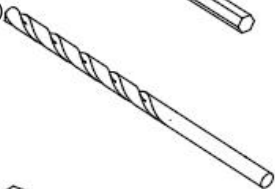
### OPEN TOILET TISSUE HOLDER W/ SHELF


**GINGER**  
*Luxury For Your Lifestyle™*

2001 CARNEGIE AVE, SANTA ANA CA 92705  
 (949) 417-5207  
 WWW.GINGERCO.COM

① REMOVE MOUNTING BRACKET

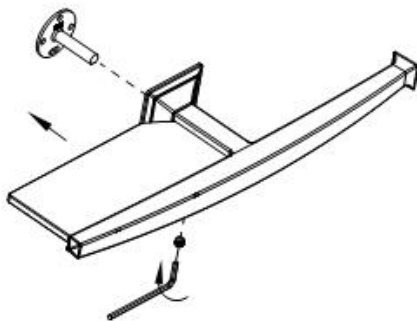


② ALIGN MOUNTING BRACKET AND MOUNT LOCATION

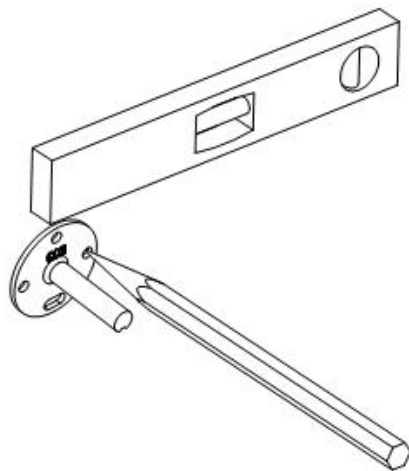


③ DRY WALL INSTALLATION

DO NOT DRILL

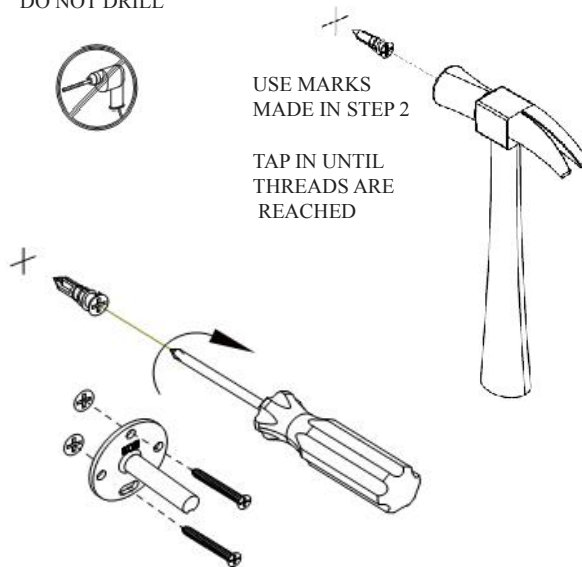

④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

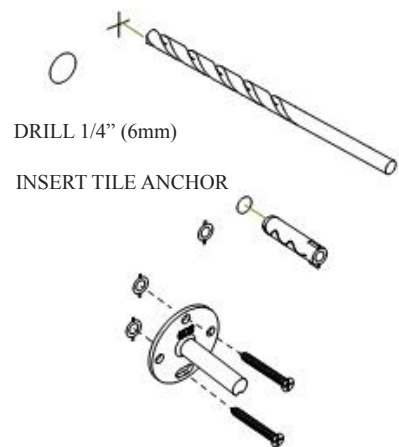

⑤ INSTALL PRODUCT ONTO BRACKET

