



SHOWER SEAT INSTALLATION INSTRUCTIONS

Jacuzzi® Model #
SS17959


Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-800-288-4002, 9 a.m. - 8 p.m., EST, Monday - Friday

PLEASE READ THESE INSTALLATION INSTRUCTIONS THOROUGHLY PRIOR TO INSTALLING THIS SHOWER SEAT

IMPORTANT: THIS PRODUCT SHOULD ONLY BE INSTALLED BY QUALIFIED AND TRAINED PERSONNEL

FAILURE TO FOLLOW THESE INSTRUCTIONS COULD LEAD TO IMPROPER INSTALLATION OF THE SHOWER SEAT, STRUCTURAL AND/OR WATER DAMAGE TO THE WALL AND IN-WALL SUPPORT STRUCTURES, AND/OR SERIOUS BODILY INJURY IN USE. IN ADDITION, ALL WARRANTIES, EXPRESS OR IMPLIED, WILL BE NULL & VOID DUE TO IMPROPER INSTALLATION OF THIS PRODUCT. THE MANUFACTURER DOES NOT ASSUME ANY LIABILITY FOR DAMAGE RESULTING FROM SERVICES PERFORMED BY OTHERS, OR FAULTY INSTALLATION, MISUSE OR MISAPPLICATION OF GOODS.

TO ASSURE PROPER AND SAFE INSTALLATION, THIS SHOWER SEAT MUST BE INSTALLED INTO A MINIMUM 2" THICK SOLID WOOD IN-WALL BACKING MATERIAL. MAKE CERTAIN IN-WALL BACKING COMPLIES WITH ALL LOCAL BUILDING CODE REQUIREMENTS.

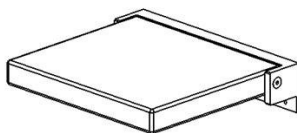

Hardware Provided: (5) M8 x 60mm Phillips Head Screws

Tools required: Marking pencil/pen, level, power drill, 17/64" carbide tip drill bit, #2 Phillips driver, silicone.

STEP #1 LOCATING

- Remove Shower Seat from package.
- Locate the area with 2" solid wood in-wall backing on the desired mounting surface.
- Place the mounting bracket in position on the wall. Using a level (not provided) ensure the bracket is level and pencil-mark the location of the mounting holes on the wall.
- Using a pencil or suitable marker, it is **extremely important** you mark the center of each of the five (5) mounting holes precisely on the mounting surface.

Proceed cautiously through the following steps in this installation process to avoid drilling into in-wall water supply lines. All mounting points must fasten into structural wood backing, minimum 2" thickness. Avoid electrical and/or plumbing behind the wall, and where possible drill through tile - not through grout.

STEP #2 MOUNTING

FIG 2.1

Use a power drill with a 3/16" carbide tip drill bit (not provided) and drill at the five (5) locations marked on the wall.

FIG 2.2

Apply a bead of silicone around the entire edge of the Shower Seat mounting bracket and inside each of the pre-drilled holes to ensure a water-tight seal will be created at all mounting locations. Secure the Shower Seat to the wall using the supplied screws by screwing them into the pre-drilled and silicone filled holes.

FIG 2.3

Fasten the Shower Seat to the mounting bracket using the provided connection bolts and ensure that the seat can be moved along the guide channel on the mounting bracket.

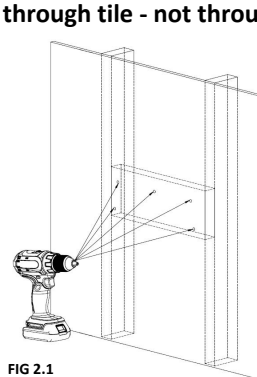


FIG 2.1

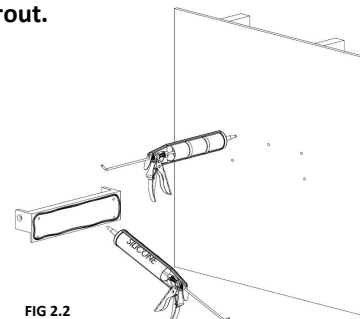


FIG 2.2

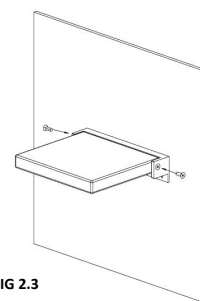


FIG 2.3