

# Multiproduct Mounting-block K-97339

### **Features**

- For use with Purist<sup>®</sup>, Stillness<sup>®</sup>, Margaux<sup>®</sup> and Kelston<sup>®</sup> freestanding bath fillers.
- Can be installed without required freestanding bath filler.

Installed component/s: Test cap, and Mud guard.





Codes/Standards ASME A112.18.1/CSA B125.1


## **KOHLER® Faucet Lifetime Limited Warranty**

See website for detailed warranty information.



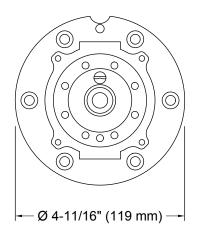





### **Technical Information**

All product dimensions are nominal.

#### **Notes**

Install this product according to the installation guide.

Adequate floor support is required. The wood support must be a minimum of 2" (51 mm) thick by 6" (152 mm) wide. 2x6 lumber is NOT adequate for this application.

Concrete can be used as the floor support. Requires 3/16" masonry drill bit and six 1/4" x 1-3/4" concrete screws, not included.

