

Features

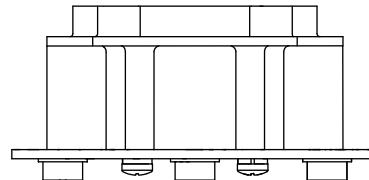
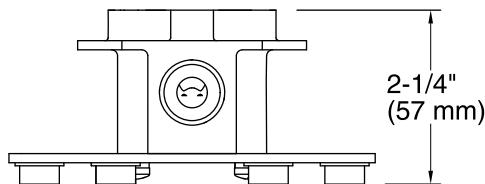
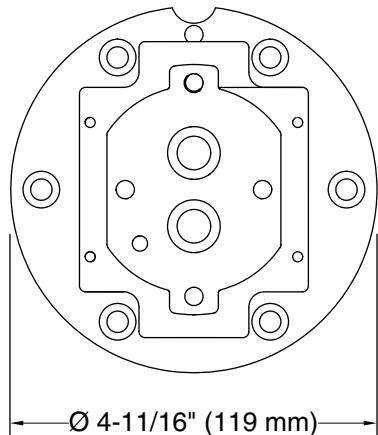
- For use with Loure® freestanding bath filler.
- Can be installed without required freestanding bath filler.

**Codes/Standards**

ASME A112.18.1/CSA B125.1

KOHLER® Faucet Lifetime Limited Warranty

See website for detailed warranty information.

**Technical Information**

All product dimensions are nominal.

Notes

Install this product according to the installation guide.

Adequate floor support is required. The wood support must be a minimum of 2" (51 mm) thick by 6" (152 mm) wide. 2x6 lumber is NOT adequate for this application.

Concrete can be used as the floor support.
Requires 3/16" masonry drill bit and six 1 1/4" x 1-3/4" concrete screws, not included.