
INSTALLATION INSTRUCTIONS EAST LINEAR PULI-DOWN KITCHEN FAUCET Model No's: 1500-5103

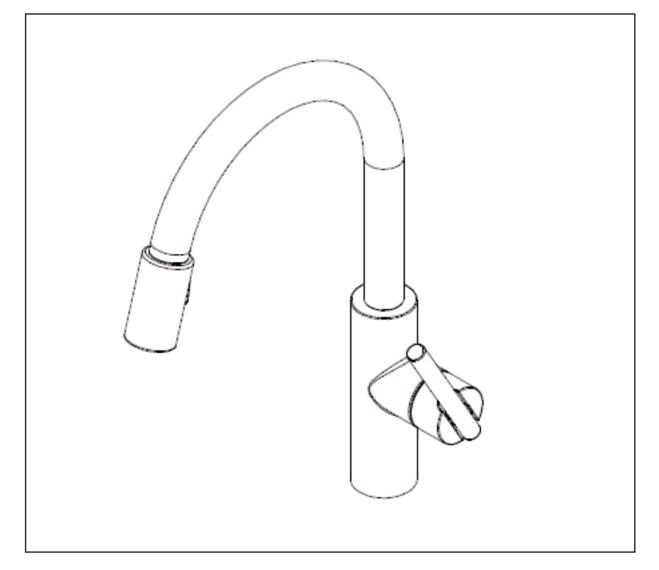




Congratulations on the purchase of your Newport Brass product, an excellent choice, that will give you years of quality service and enhance the look and style of your home.

## Recommended Installation by a Professional Plumbing Contractor

**Note**: The use of petroleum base plumbers putty on our products will nullify the warranty. We recommend the use of clear silicone sealing materials.

If mounting faucet to stainless steel rim, an under-mount support, (e.g. wood, appropriate size  $\times$  1/2" thick), should be utilized.

I. Drill hole in mounting surface. Recommended deck hole Ø1.350"not to exceed Ø1.562".

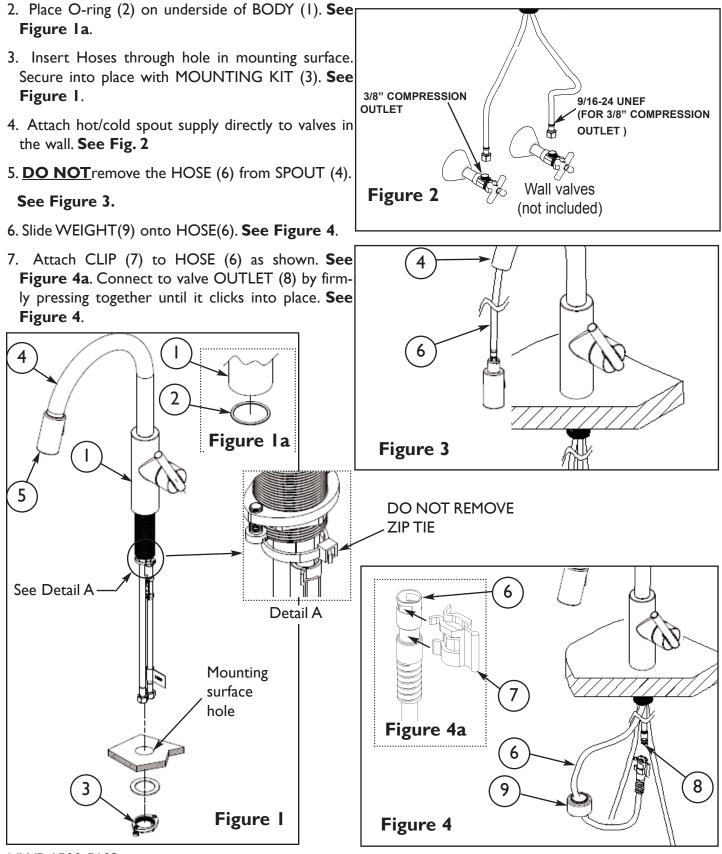


NWP-1500-5103 REV-  With faucet in the OFF position, open water supply valves. Inspect connections under sink for leaks. <u>DO</u> <u>NOT</u> turn faucet on yet.

4

5

- 9. Pull SPRAYHEAD (5) out from SPOUT (4). While holding HOSE (6), unscrew SPRAYHEAD (5). Aiming HOSE (6) into sink, turn on faucet to center position (mixed) and flush for one minute to remove debris from lines.
- 10. Turn OFF faucet and reattach SPRAYHEAD (5) to HOSE (6). See Figure 5.
- II. Check the SPRAYHEAD (5) by operating the trigger from aerator to spray.

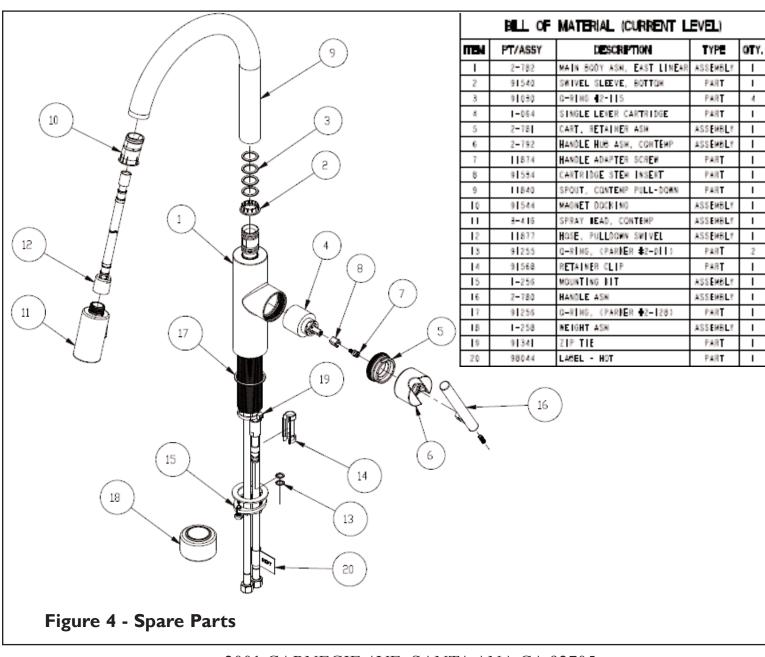

NWP-1500-5103 REV- 2001 CARNEGIE AVE, SANTA ANA CA 92705 (949) 417-5207 WWW.NEWPORTBRASS.COM