
INSTALLATION INSTRUCTIONS NADYA PULL DOWN KITCHEN FAUCET Model No's: 2510-5103

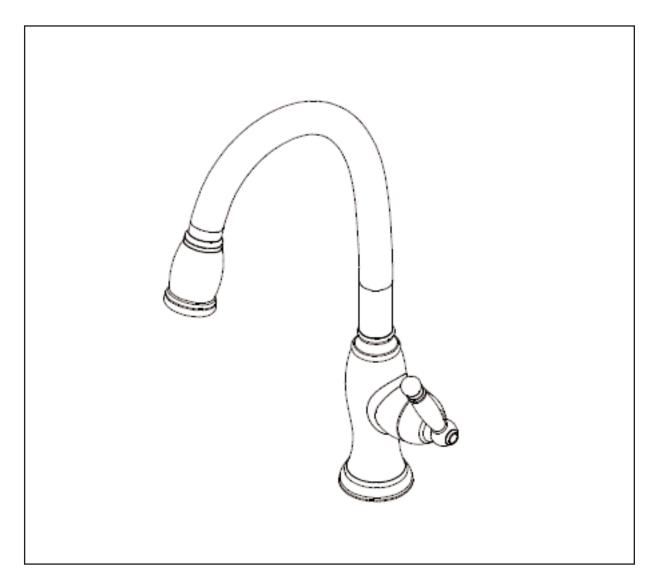


Congratulations on the purchase of your Newport Brass product, an excellent choice, that will give you years of quality service and enhance the look and style of your home.


Recommended Installation by a Professional Plumbing Contractor

Note: The use of petroleum base plumbers putty on our products will nullify the warranty. We recommend the use of clear silicone sealing materials.

If mounting faucet to stainless steel rim, an under-mount support, (e.g. wood, appropriate size $\times 1/2$ " thick), should be utilized.


- Drill hole in mounting surface. Recommended deck hole Ø1.350" not to exceed Ø1.562".
- 2. Place O-ring (2) on underside of base RING (1). See Figure 1a.
- Insert Hoses through base RING (1) and hole in mounting surface. Secure into place with MOUNT-ING KIT (3). See Figure 1.
- Attach hot/cold spout supply directly to valves in the wall. See Fig. 2
- <u>DO NOT</u> remove the HOSE (6) from SPOUT (4).
 See Figure 3.
- 6. Slide WEIGHT(9) onto HOSE(6). See Figure 4.
- 7.Attach CLIP (7) to HOSE (6) as shown. See Figure
 4a. Connect to valve OUTLET (8) by firmly pressing together until it clicks into place. See Figure 4.

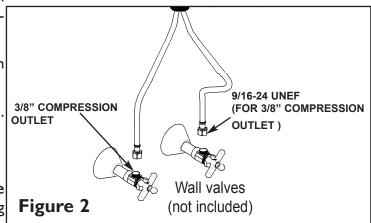

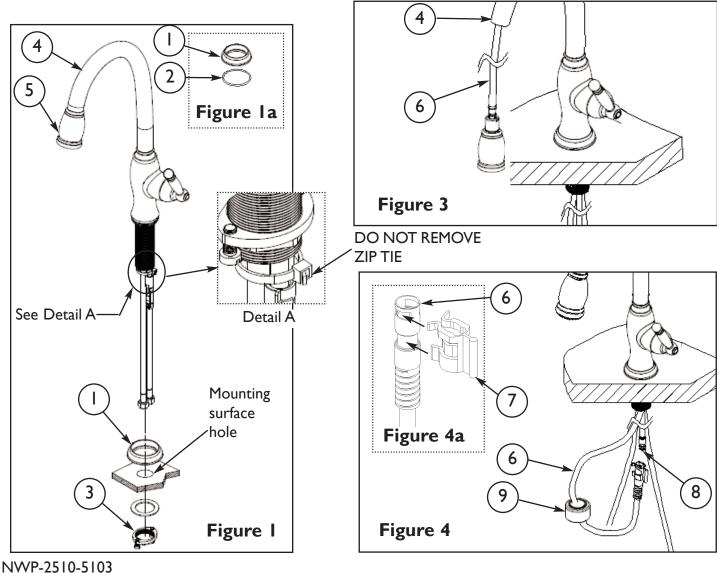

REV-

- 8. With faucet in the OFF position, open water supply valves. Inspect connections under sink for leaks. <u>DO</u> <u>NOT</u> turn faucet on yet.
- 9. Pull SPRAYHEAD (5) out from SPOUT (4). While holding HOSE (6), unscrew SPRAYHEAD (5). Aiming HOSE (6) into sink, turn on faucet to center position (mixed) and flush for one minute to remove debris from lines.
- Turn OFF faucet and reattach SPRAYHEAD (5) to HOSE (6). See Figure 5.
- II. Check the SPRAYHEAD (5) by operating the trigger from aerator to spray.

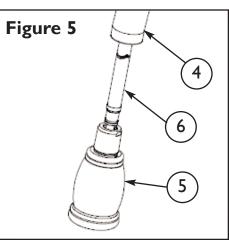

12 1 2-779 MAIN BODY ASM. MADYA ASSEMBLY 1 12 10 3 91340 SHIVEL SLEEVE. BOTTOM PART 1 4 11715 CARTRIDGE RETAINER PART 1 5 11715 CARTRIDGE CAP PART 1 6 2-745 HANDLE ASM. THAD ASSEMBLY 1 14 11715 CARTRIDGE STEM INSERT. FLT HD N4 X .7 X IONN PART 1 13 2 9 4 1 18 3-415 SPRAT HEAD. TRADITIONAL ASSEMELY 1 13 2 9 5 6 8 1 11.839 SPOUT, TRAD PULL-DOWN PART 1 13 3-415 SPRAT HEAD, TRADITIONAL ASSEMELY 1 1 13 3-415 SPRAT HEAD, TRADITIONAL ASSEMELY 1 14 11837 HAGNET DOCKING ASSEMELY 1 1 15 2-777 RASE MEAD ASSEMELY 1 14 11837 HAGNET	BILL OF MATERIAL (CURRENT					
12 1 10 2 1 10 4 11 11 4 11 11 4 11 11 4 11 11 4 11 11 4 11 11 4 11 11 4 11 11 4 11 11 4 11 11 4 11 11 4 11 11 11 11 11 12 12 13 14 11 11 13 14 11 11 13 14 11 11 13 14 11 14 14 14 14 14 14 14 14 14 14 15 11 16 27.78 CAP ASM ASSEMELY 1 13 2 9 4 3 91334 CARTHIDGE TEM INSERT PART 1 14 11 11 11 11 11 11 12 91344 CARTHIDGE TEM INSERT		ΠEM	PT/ASSY	DESCRIPTION	TYPE	OTY.
12 10 3 91540 SNIVEL SLEEVE. HOTTOM PART I 10 10 6 2-745 HANDLE ASM. TRAD ASSEMELY I 14 11715 CARTRIDGE CAP PART I 14 9 91536 SCREW-FLT HD MA X.7 X 10mm PART I 13 2 9 4 I I I I BART I 13 2 9 4 I I III BABS SCREW-FLT HD MA X.7 X 10mm PART I 13 2 9 4 III III BABS SPOUT, TRAD PULL-DOWN PART I 14 118177 PART I III III BABS SPOUT, TRAD PULL-DOWN PART I 13 3-415 SPART HEAD, TRADITIONAL ASSEMELY I 14 III BIT7 HASE RING ASM ASSEMELY I 15 2-777 BASE RING ASM ASSEMELY I 16 91568 RETAINER 42-01		1	2-779	MAIN BODY ASM, NADYA	ASSEMBLY	
12 10 3 91540 SNIVEL SLEEVE. HOTTOM PART I 10 10 6 2-745 HANDLE ASM. TRAD ASSEMELY I 14 11715 CARTRIDGE CAP PART I 14 9 91536 SCREW-FLT HD MA X.7 X 10mm PART I 13 2 9 4 I I I I BART I 13 2 9 4 I I III BABS SCREW-FLT HD MA X.7 X 10mm PART I 13 2 9 4 III III BABS SPOUT, TRAD PULL-DOWN PART I 14 118177 PART I III III BABS SPOUT, TRAD PULL-DOWN PART I 13 3-415 SPART HEAD, TRADITIONAL ASSEMELY I 14 III BIT7 HASE RING ASM ASSEMELY I 15 2-777 BASE RING ASM ASSEMELY I 16 91568 RETAINER 42-01		2	-064	SINGLE LEVER CARTRIDGE	PART	
10 5 11715 CARTRIDGE CAP PART 1 14 6 2-745 HANDLE ASM, TRAD ASSEMBLY 1 13 3 9 9 3 9 9 8 9 9 13 8 9 9 13 9 9 13 9 9 13 0 9 13 0 0 11 11839 SPOUT, TRAD PULL-DOWN PART 1 13 2 9 5 6 8 11 11839 SPOUT, TRAD PULL-DOWN PART 1 13 3 415 SPRAY HEAD, TRADITIONAL ASSEMBLY 1 14 11877 HOSE, PULLDOWN PART 1 14 11877 HOSE, PULLDOWN SWIVEL ASSEMBLY 1 15 2 777 BASE RING ASM ASSEMELY 1 16 91568 RETAINER CLIP PART 1 17 1-256 MOUNTING KIT ASS		3	9 540		PART	
10 6 2-745 HANDLE ASM, TRAD ASSEMBLY I 14 3		- 4	11714	CARTRIDGE RETAINER	PART	
13 2 9		5	11715	CARTRIDGE CAP	PART	1
13 2 9		6	2-745	HANDLE ASM, TRAD	ASSEMBLY	I
1* 3 91334 CARTENDOE STEM INSERT PART 1 13 2 4 11 11839 SPOUT, TRAD PULL-DOWN PART 1 13 2 9 5 6 8 11 11839 SPOUT, TRAD PULL-DOWN PART 1 13 3-415 SPRAY HEAD, TRADITIONAL ASSEMBLY 1 14 11877 HOSE, PULLDOWN SNIVEL ASSEMBLY 1 14 11877 HOSE, PULLDOWN SNIVEL ASSEMBLY 1 15 2-777 BASE RING ASM ASSEMBLY 1 16 91368 RETAINER CLIP PART 1 17 1-256 MOUNTING NIT ASSEMBLY 1 18 91255 D-RING, UPARKER 42-0111 PART 1 19 91341 ZIP TIE PART 1		- 7	2-778	CAP ASM	ASSEMBLY	Т
1* 3 91334 CARTENDOE STEM INSERT PART 1 13 2 4 11 11839 SPOUT, TRAD PULL-DOWN PART 1 13 2 9 5 6 8 11 11839 SPOUT, TRAD PULL-DOWN PART 1 13 3-415 SPRAY HEAD, TRADITIONAL ASSEMBLY 1 14 11877 HOSE, PULLDOWN SNIVEL ASSEMBLY 1 15 2-777 BASE RING ASM ASSEMBLY 1 16 91568 RETAINER CLIP PART 1 17 1-256 MOUNTING NIT ASSEMBLY 1 18 91255 D-RING, UPARNER 42-0111 PART 1 18 91255 D-RING, UPARNER 42-0111 PART 1 19 91341 ZIP TIE PART 1		8	92035	SCREW- FLT HD H4 X .7 X 10mm	PART	Т
13 2 3 4 1 1 1 1 1 1 1 1 1 1 1 1 1	(14) $\int $ (3)	9	91534	CARTRIDGE STEM INSERT	PART	Т
13 2 3 4 1 1 1 1 1 1 1 1 1 1 1 1 1		0	9 030	0-RING #2-115	PART	4
13 13 12 91344 MACHEL DULKING ASSEMPLY 1 13 3-415 SPRAY HEAD, TRADITIONAL ASSEMPLY 1 14 11817 HOSE, PULLDOWN SWIVEL ASSEMPLY 1 15 2-777 HASE RING ASM ASSEMPLY 1 16 91368 RETAINER CLIP PART 1 17 1-256 MOUNTING HIT ASSEMPLY 1 18 91255 D-RING, UPARHER 42-0111 PART 2 19 91341 ZIP THE PART 1		П	839		PART	Ι
1 3 3-415 3-FRAT HEAD, TRADITIONAL ASSEMBLY 1 1		2	9 544		ASSEMBLY	Ι
1 1 2-777 HASE RING ASM ASSEMBLY 1 1 <th>(1) (2) (2) (3)</th> <td>13</td> <td></td> <td></td> <td>ASSEMBLY</td> <td>Ι</td>	(1) (2) (2) (3)	13			ASSEMBLY	Ι
Image: constraint of the second sec		-14			ASSEMBLY	Ι
1 17 1-256 MGUNTING KIT ASSEMBLY 1 1 10 0 7 10 91255 0-RING, (PARKER #2-011) PART 2 1 10 0 7 19 91341 ZIP TIE PART 1		5	2-777		ASSEMBLY	Ι
1 17 1-256 MQUNTING RIT ASSEMBLY 1 19 19 7 19 91341 21P THE PART 1 19 19 10 10 1-258 NEIGHT ASM ASSEMBLY 1	$ \left \left($					Ι
1 19 19 19 19 19 10 10 10 10 10 10 10 10 10 10			-256		ASSEMBLY	Ι
19 19 19 19 19 19 19 19 19 19		8	9 255		PAR	2
20 I-258 NEIGHT ASM ASSEMBLY I						Ι
		20	-258	NEIGHT ASM	ASSEMBLY	1
Figure 6 - Spare Parts	Figure 6 - Spare Parts					

NWP-2510-5103 REV- 2001 CARNEGIE AVE, SANTA ANA CA 92705 (949) 417-5207 WWW.NEWPORTBRASS.COM