Installation Instructions


THROAT ASSEMBLY

Model No: NWP 277-01

NWP 277-02

NWP 277-03



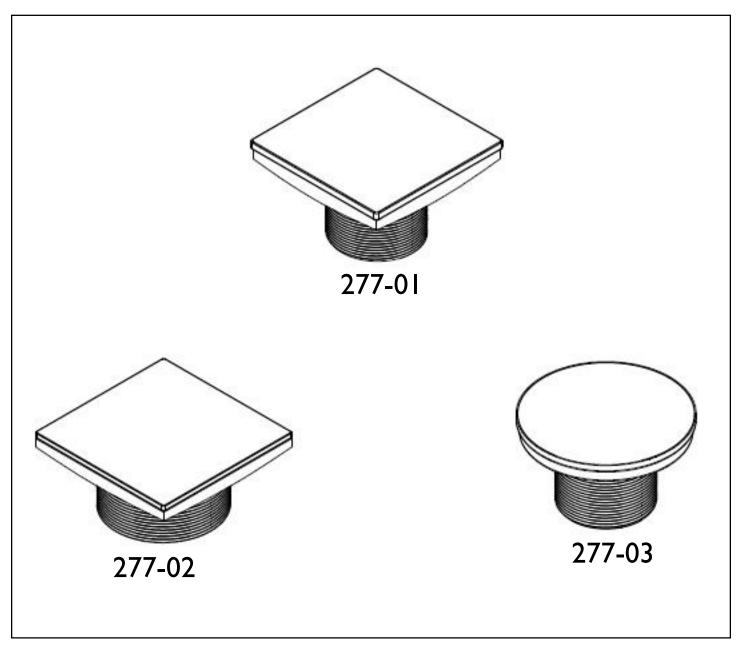

INSTALLATION INSTRUCTIONS

Brasstech recommends this product be installed by licensed contractor(s)

THROAT/GRID HEIGHT ADJUSTMENT (see figure 1)

- 1. To obtain proper grid height, rotate THROAT ASSEMBLY [8] to raise or lower. One (1) complete rotation of THROAT ASSEMBLY [8] is equal to 1/8" in vertical adjustment.
- **2**.Proper height should be determined by flooring contractor.
- **3**.Before the final mortar application it is suggested to place some PEA GRAVEL [9] over WEEP HOLES [7] to prevent blockage of the holes.

NOTES: All figures show cast iron no-hub connection

277-01 engages with 2"IPS drain body [9]

277-02 engages with 4" IPS drain body [9]

277-03 engages with 2" IPS drain body [9]

