
INSTALLATION INSTRUCTIONS KITCHEN FAUCET WITH PULLDOWN SPRAY Model No's: 3200-5113, 3200-5223

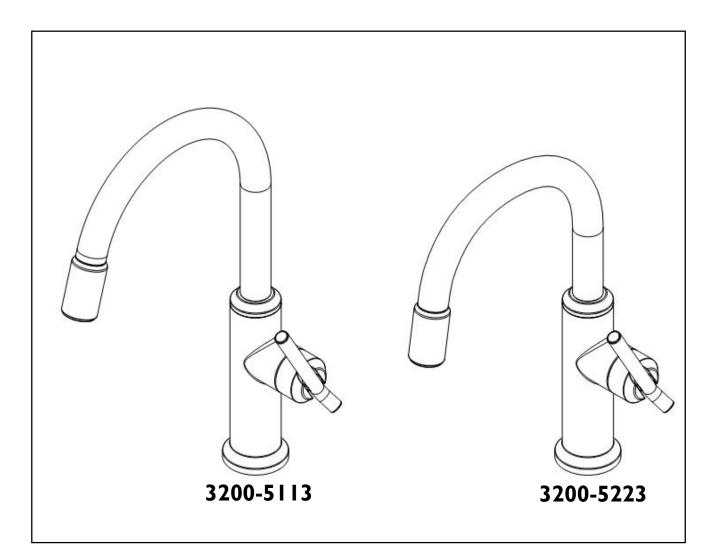


PORT BRASS

Congratulations on the purchase of your Newport Brass product, an excellent choice, that will give you years of quality service and enhance the look and style of your home.


Recommended Installation by a Professional Plumbing Contractor


Note: The use of petroleum base plumbers putty on our products will nullify the warranty.

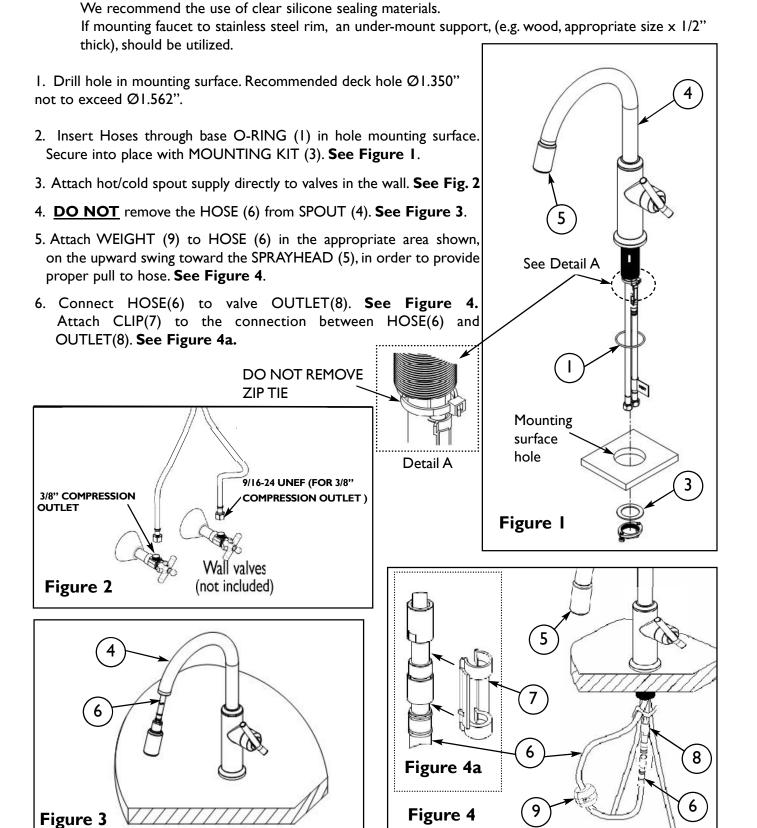

NWP-3200-5113 REV -

- 7. With faucet in the OFF position, open water supply valves. Inspect connections under sink for leaks. **DO NOT** turn faucet on yet.
- 8. Pull SPRAYHEAD (5) out from SPOUT (4). While holding HOSE (6), detach SPRAYHEAD (5). Aiming HOSE (6) into sink, turn on faucet to center position (mixed) and flush for one minute to remove debris from lines.
- 9. Turn OFF faucet and reattach SPRAYHEAD(5) to HOSE(6). See Figure 5.
- 10. Check the SPRAYHEAD(5) by operating the trigger from aerator to spray.

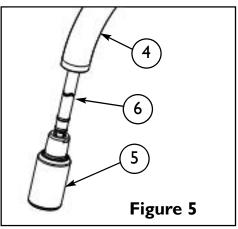

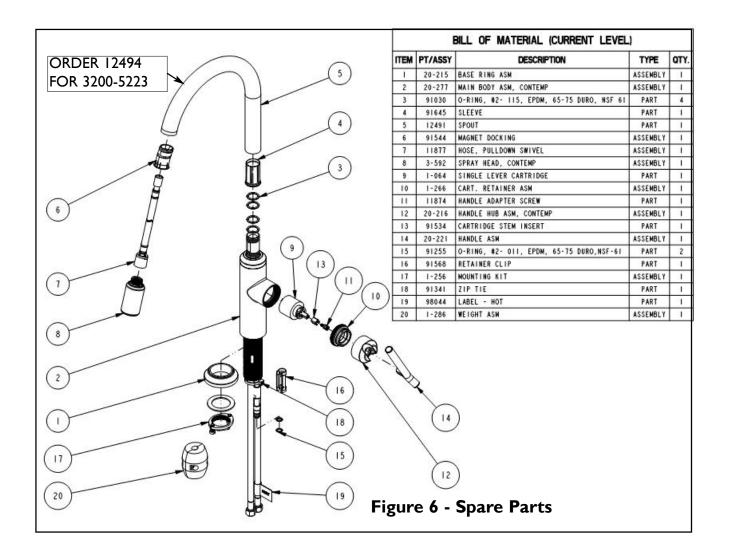

NWP-3200-5113 EN-3076 REV -

2001 CARNEGIE AVE, SANTA ANA CA 92705 (949) 417-5207 WWW.NEWPORTBRASS.COM

05/22/17